
ZyXEL Prestige 2002L Broadband Telephone Adapter


Pack Contents:

- 1 x Prestige 2002L broadband telephone adapter
- 1 x power supply
- 1 x telephone cable (black)
- 1 x Ethernet cable (red)
- 1 x CD setup guide



Connecting to the Prestige 2002 Setup Screens

Please make sure you have connected the equipment correctly before adding the settings. Here is a screenshot to help.

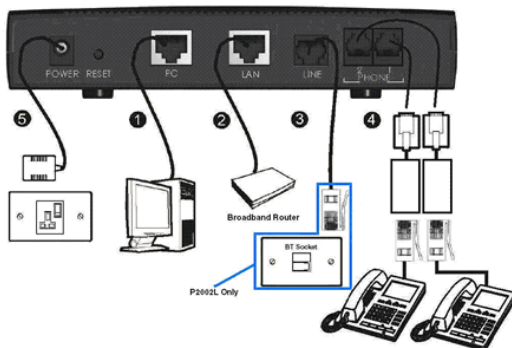

- 2 Change the network settings of your computer so that you can connect with the Prestige 2002 setup screen. Make a note of your current settings, as you need to return to these settings later. To change your network settings click:
Start > Settings > Network Connections

- 3 Select Internet Protocol (TCP/IP) then click on Properties. Set the IP address to 192.168.5.3, the subnet mask to 255.255.255.0 and the default gateway to 192.168.5.1. Leave the DNS information blank. Click **OK** to apply the changes.

4 Checking the Prestige's IP address

- Pick up your phone's receiver
- Press **'****'** on your phone's keypad and wait for the message that you are in the configuration settings menu.
- Press **'5'** followed by the key.
- Listen to the IP address and make a note of it as this should be the same as the IP address entered in the Internet Protocol Properties.
- Hang up the receiver.

- 5 Open your browser - type in **http://192.168.5.1/** on the address line and click ENTER. This should bring up the Prestige 2002 setup screen. You will be asked for a password. The default password is **1234**. Change the password to **admin** until after you have completed setup.

6 Setting up networking on the Prestige 2002

Click on **Ethernet** on the menu and set the same IP range as your router and home network. Suggested settings:

IP Address: 192.168.1.200

Subnet mask: 255.255.255.0

Default Gateway: 192.168.1.1

Leave the Primary & Secondary DNS Blank then click **Apply**.

- 7 Return to the setup screen by going to **http://192.168.1.200/** (or the IP you assigned in step 6) in your browser.

- 8 Next, you need to change your PlusTalk or VoIP account settings. Click **VoIP** on the side menu. Access to your router settings is protected with a username and password. By default the username is **Administrator**, the password is blank. You can change these later to secure your settings. Next, select **Easv Setup** from the menu.

9 IP settings for PlusTalk

The screenshot shows the VoIP configuration interface. At the top, there are tabs for 'VoIP' and 'QoS'. Below that, there is a checkbox for 'Active' and a dropdown for 'SIP Account' set to 'SIP1'. The 'SIP Settings' section contains the following fields: SIP Number (blank), SIP Local Port (5060), SIP Server Address (blank), SIP Server Port (5060), REGISTER Server Address (blank), REGISTER Server Port (5060), and SIP Service Domain (blank). The 'Authentication' section has fields for Authentication User ID and Authentication Password. The 'Caller ID' section has a checkbox for 'Sending Caller ID' and a dropdown for 'Incoming Call apply to' with options for 'Phone1' and 'Phone2'. At the bottom, there are 'Apply' and 'Reset' buttons.

Sip Number: Your PlusTalk account number (6 digit number)

Local Port: 5060

SIP Server Address: sip.plus.net

SIP Port: 5060

SIP Server Address: sip.plus.net

Registrar Port: 5060

Sip Service Domain: sip.plus.net

Authentication **User ID:** Your PlusTalk account number (6 digit number)

Authentication **Password:** Your PlusTalk password / VoIP password

Click **Apply** to save the settings.

10 Click on **Settings** under Advanced Settings.

The only section that needs configuring is the Outbound Proxy - Tick the **Active** box and setup as shown:



Outbound Proxy

Active

Server Address

Server Port (5060:8030)

Outbound Proxy Settings

Server Address: sip.plus.net

Server port: 5060

Next, scroll to the bottom and click **Apply**.

The account should register when these settings are applied. If the PWR/VoIP indicator is coloured **amber** then the SIP account is activated. If the PWR/VoIP indicator is still **green**, go to the next step.

Your Prestige 2002 is now ready to connect and start using PlusTalk or VoIP service.

- 11 To connect/disconnect, click **Maintenance** on the side menu. Click Register on SIP1, and SIP2 if you are using both phone ports. When registered the PWR/VoIP indicator is **amber**, when disconnected from the SIP service, the same indicator will be **green**.